

AEP导入安装指导

佐藤自動識別系統國際貿易(上海)有限公司



2018.5.22 聂炜超

AEP安装

1. 将PKG文件导入到U盘根目录下

2. 等待打印机屏幕显示是否安装PKG文件，点击右键确认

3. 屏幕显示AEP安装中，待AEP更新完成后，请手动更新数据库。

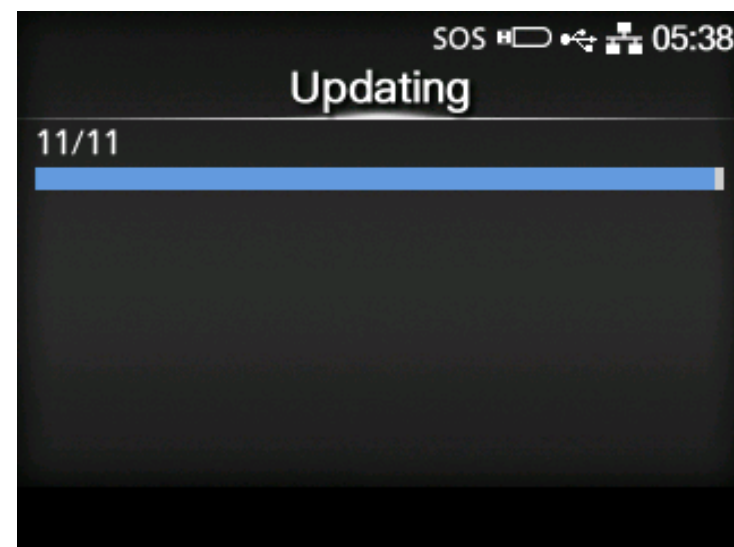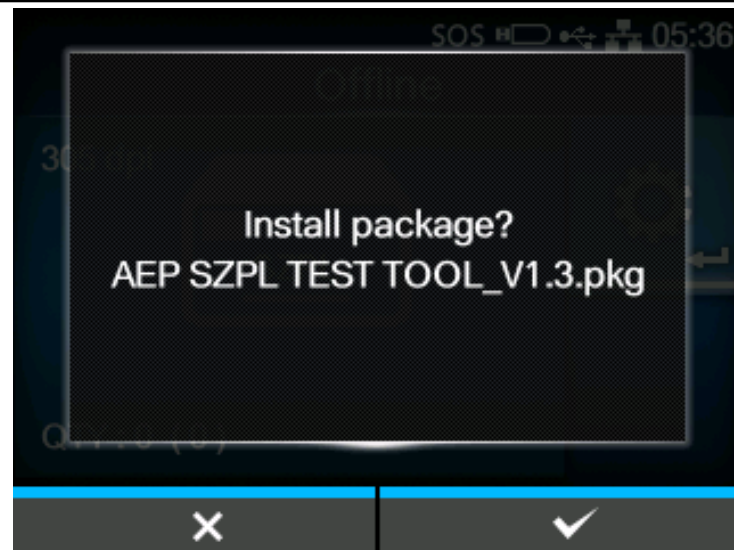



Thank you

©20XX SATO XYZ. All rights Reserved.

Specifications subject to change without notice.

Any unauthorized reproduction of the contents of this presentation, in part or whole, is strictly prohibited.

SATO is a registered trademark of SATO Corporation and its subsidiaries in Japan, the U.S. and other countries.

All other trademarks are the property of their respective owners.

www.satoworldwide.com